




SWISHER  
228002 - Cleaner Furniture Polish Aerosol

Cleans and protects wood furniture, metal, leather, chrome, stainless steel and vinyl surfaces. Citrus scent.



SAFETY DATA SHEET	
SWISHER AEROSOL FURNITURE POLISH	
SECTION 1 - PRODUCT AND COMPANY IDENTIFICATION	
Product name	SWISHER AEROSOL FURNITURE POLISH
Other means of identification	Not applicable
Recommended use	Furniture Finish
Restrictions on use	Intended for industrial and professional use.
Product classification	Product classification(s)
Company	60101312 1700000000 21 Shaw, Minnesota USA 55122 1-800-441-1000
Emergency health information	1-800-338-0000 (in US/Canada), 1-877-338-0000 (outside US)
Revised date	10/16/2019
SECTION 2 - HAZARD IDENTIFICATION	
GHS Classification	Category 2 Category 2 (Central nervous system)
Flammable aerosols	
Specific hazard information	Highly flammable
GHS label elements	
Hazard pictograms	
Signal Word	Warning
Hazard Statements	Flammable aerosol. May cause drowsiness or dizziness.
Precautionary Statements	Prevention: Keep away from heat/sparks/open flames/hot surfaces. No smoking. Do not spray on or use flame or the ignition source. Flammable contents. Do not breathe dust, gas, mist, vapors, or aerosols. After use, wash exposed skin. Wash clothes if they have been soiled. Do not use near open flame. Do not use in a well-ventilated area. Use only for intended use. Do not use for anything else. Reactivity: If RELEASED, Release product to tank or keep combustible for burning. Call a PROGUARD CERT Specialist for best result. Stability: Stable at recommended storage. Keep container tightly closed. Store away from heat and open flame. Do not expose to temperatures exceeding 120 °F (50 °C). Disposal: Dispose of contents or container to an approved waste disposal plant.
SWISHER	170

Long Description

Benefits

Storage & Usage

Do not breathe dust/ fume/ gas/ mist/ vapors/ spray. Use only with adequate ventilation. Contents under pressure. Do not puncture. Wash hands thoroughly after handling. In case of mechanical malfunction, or if in contact with unknown dilution of product, wear full Personal Protective Equipment (PPE). Keep in a cool, well-ventilated place. Keep out of reach of children. Keep container tightly closed. Store in suitable labeled containers.

Product Specifications

Brand		Manufacturer		Product Category		
SWISHER		PROGUARD / SWISHER				
MFG #	SPC #	GTIN		Pack	Pack Desc.	
6101312	228002	10025469037425		6	6/17 OZ	
Gross Weight	Net Weight	Country of Origin		Kosher	Child Nutrition	
6.79lb	5.78lb	USA			No	
Shipping Information						
Length	Width	Height	Volume	TlxHl	Shelf Life	Storage Temp From/To
8.34in	5.72in	9.86in	0.27ft3	37x4	0DAYS	40°F / 111°F



**SWISHER**

## 228002 - Cleaner Furniture Polish Aerosol

Cleans and protects wood furniture, metal, leather, chrome, stainless steel and vinyl surfaces. Citrus scent.



## Additional Images

